XYLEM®

# INSTALLATION INSTRUCTIONS
# GLENAYRE™
VANITY
**V-GLENAYRE-24DK**

## SUGGESTED TOOLS AND MATERIALS


Philips Screwdriver

Level

Drill

Tape Measure

Safety Glasses

## ROUGHING IN

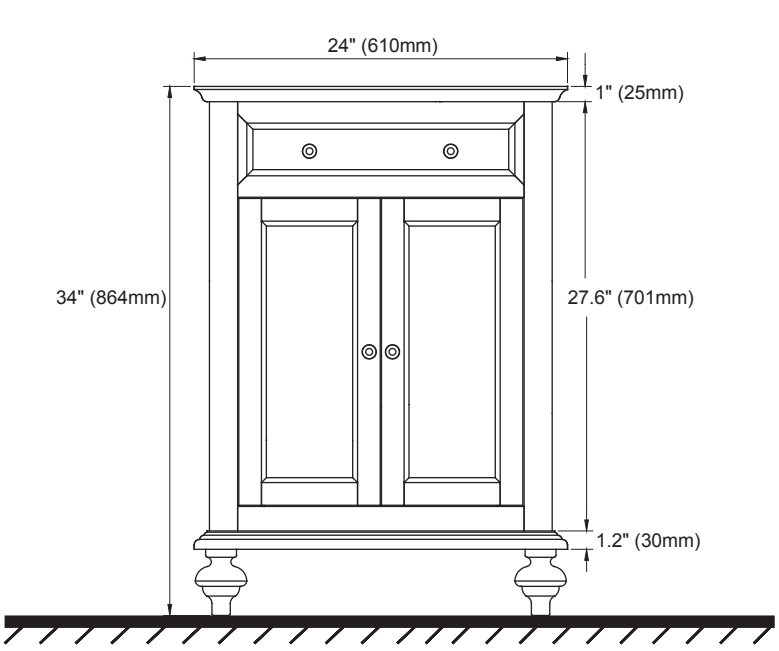


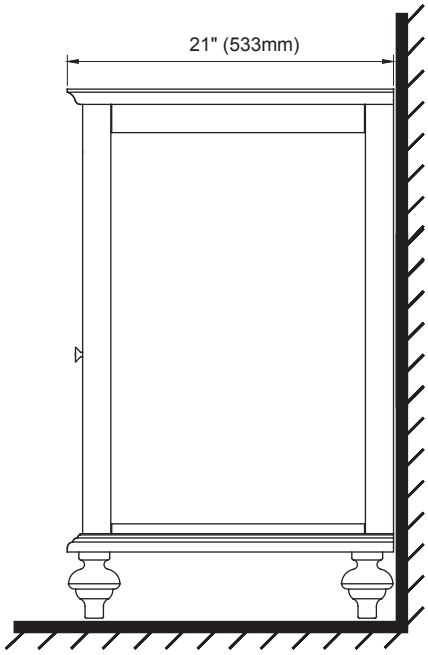


## CARE AND CLEANING OF VANITY

Dust the vanity frequently with a clean, soft, dry, lint-free cloth, as well as polish it on a regular basis. Clean the surface by rubbing in the direction of the grain. Avoid using silicone cleaners and waxes.

Clean up excess water and spills immediately. Use blotting rather than a wiping action. Water left over a long period of time will cause white spots in the finish. Please note that some chemicals may damage the finish.